



# Rotary table cylinder

## WRQ Series

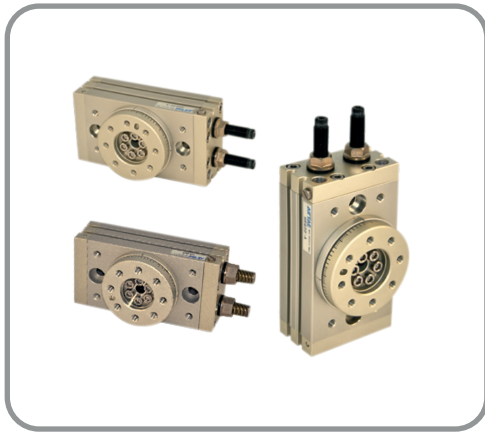

### Symbol




### Product feature


1. Rack and pinion design, stable functioning.
2. Double cylinder structure, double output could be achieved.
3. The manufacturing precision of working platform is high, and is easy for installation, and is of precise orientation.
4. The center of working platform has a through hole, and pipe can be located and passed through this hole;
5. Guide hole is designed on the both side of the cylinder body (10~200) or undersurface (2~7), which is simply to install.
6. Two modes of buffer could be chosen, adjustment bolt buffer and internal shock absorber, the maximum buffer energy of internal shock absorber is 3-5 times that of adjustment bolt buffer.

### Actual forage output


Applicable type: WRQ2,WRQ3,WRQ7

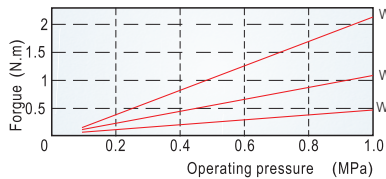

Applicable type: WRQ10,WRQ20,WRQ30,WRQ50

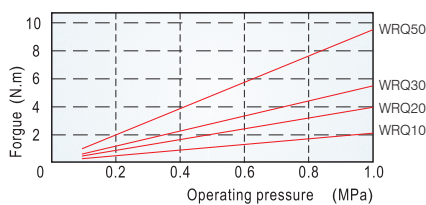

Applicable type: WRQ70,WRQ100,WRQ200

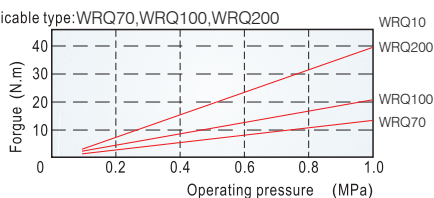

### Specification

Specification		2	3	7	10	20	30	50	70	100	200		
Acting type		Double rack and pinion(Double acting)											
Fluid		Air(to be filtered by 40 μm filter element)											
Operating pressure	With adjustment bolt	0.1~0.7MPa(15~100psi)(1.0~7.0bar)			0.1~1.0MPa(15~145psi)(1.0~10.0bar)								
	With internal shock absorber	-			0.1~0.6MPa(15~87psi)(1.0~6.0bar)								
Proof pressure		1.5MPa(218psi)(15.0bar)											
Temperature	°C	0~60											
Angle adjustment range		0~190°								0~200°			
	With adjustment bolt	0.2°											
Repeatable precision	With internal shock absorber	-			0.05°								
	With adjustment bolt	-											
Theoretic moment (Nm)(0.5MPa)		0.2	0.33	0.63	1.1	2.2	2.75	5.15	7.54	11.25	21.98		
	With internal shock absorber	-											
Cushion type	With adjustment bolt	Rubber bumper											
	With internal shock absorber	-			Shock absorber								
Port size	End ports	M5 × 0.8								1/8" (1)			
	Side ports	M5 × 0.8											
Weight	g	120	175	270	535	940	1260	2060	2890	4100	7650		

① PT thread、NPT and G thread are available.

Add)WRQ series are all attached with magnet, please refer to Page 419~442 for the specific content of sensor switch.

### Maximum allowed movement energy and rotation times

Model	Maximal allowed energy (J)		Rotation times (s/90°)	
	With adjustment bolt	With internal shock absorber	With adjustment bolt	With internal shock absorber
WRQ2	0.0015	-	0.2~0.7	-
WRQ3	0.002	-	0.2~0.7	-
WRQ7	0.006	-	0.2~1.0	-
WRQ10	0.01	0.04	0.2~1.0	0.2~0.7
WRQ20	0.025	0.12	0.2~1.0	0.2~0.7
WRQ30	0.05	0.12	0.2~1.0	0.2~0.7
WRQ50	0.08	0.30	0.2~1.0	0.2~0.7
WRQ70	0.24	1.1	0.2~1.5	0.2~1.0
WRQ100	0.32	1.6	0.2~2.0	0.2~1.0
WRQ200	0.56	2.9	0.2~2.5	0.2~1.0

Note) ①: The movement energy should not exceed the allowed maximum energy, or the inner accessories of product would be damaged;

②: When the rotation times of with shock absorber is larger than the allowed tolerance, the bigger effect will be lost.

### Ordering code

**WRQ20 A**

- Model**
  - WRQ: Rotary Table/Rack & Pinion Style
- Specification**
  - 2 3 7 10 20 30 50 70 100 200
- Thread type** ①
  - Blank: PT
  - T: NPT
  - G: G
- Cushion type**

Specification	Cushion type
2 3 7	Blank: With adjustment bolt
10 20 30 50	Blank: With adjustment bolt
70 100 200	A: With internal shock absorber

Note ①: When it is 2,3,7,10,20 specification, thread type is M5, it is blank here.

Add)WRQ series are all attached with magnet.


### Maximum allowed loading

Loading type	Model										
	WRQ2	WRQ3	WRQ7	WRQ10	WRQ20	WRQ30	WRQ50	WRQ70	WRQ100	WRQ200	
Maximal allowed radial loading (N)	18	30	50	80	150	200	300	330	390	540	
Maximal allowed axial loading (N)	35	50	70	80	150	200	300	300	500	740	
Maximal allowed bending moment (Nm)	0.8	1.1	1.5	2.5	4.0	5.5	10.0	12.0	18.0	25.0	

# Rotary table cylinder

## WRQ Series


### Inner structure and material of major parts

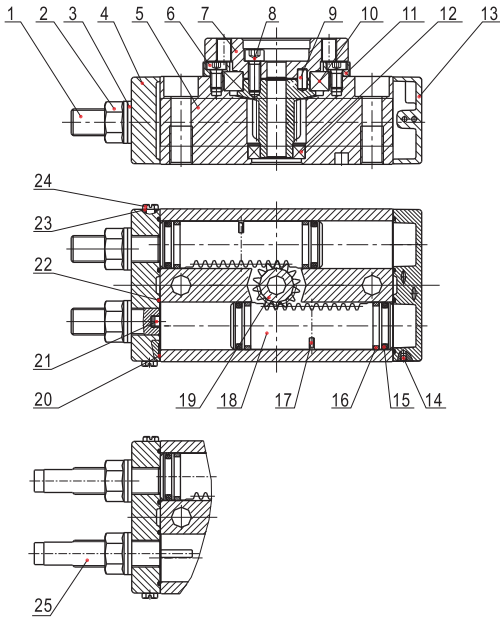

WRQ □-A (With internal shock absorber)

### Dimensions

WRQ2,3,7

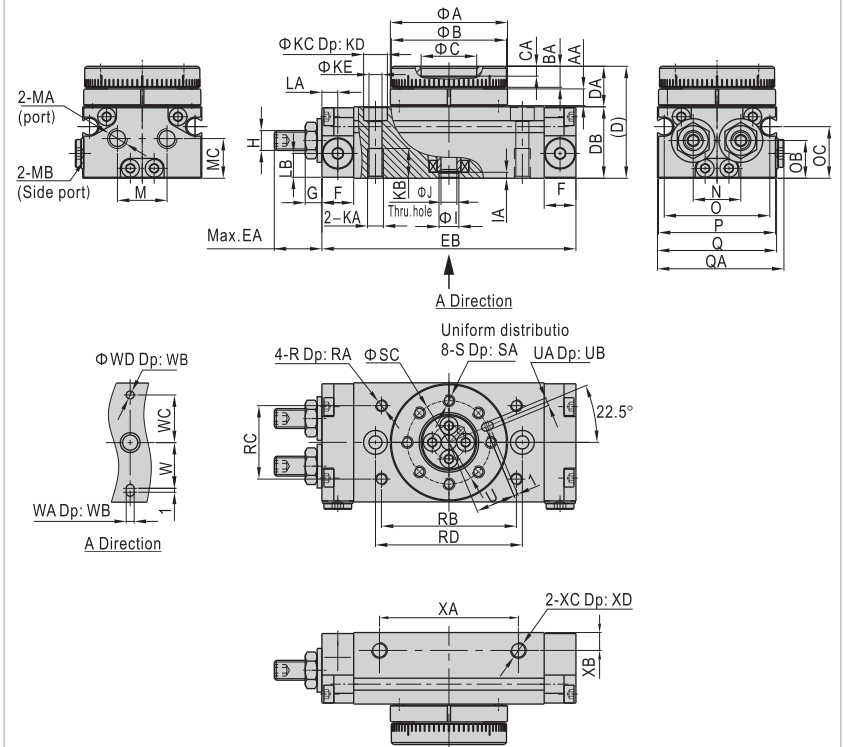

Type\Item	A	AA	B	BA	C	CA	D	DA	DB	EA	EB	F	G
2	29.5(h9)	4.2	29(h9)	5.3	14(H9)	2.5	28.2	10.2	18	12	64	8	4.2
3	34(h9)	4.2	33(h9)	5.3	17(H9)	2.5	30.5	10	20.5	12	70	8	4.2
7	40(h9)	4.5	39(h9)	6.5	20(H9)	3	34.5	11.5	23	15	79.5	8	4.2

Type\Item	H	I	IA	J	KA	KB	KC	KD	KE	LA	LB	M
2	M5 × 0.8	5(H9)	1.5	3.8	M4 × 0.7	7.5	6	3.5	3.3	4	6	12.5
3	M5 × 0.8	6(H9)	1.5	5	M5 × 0.8	8.5	7.5	4.5	4.2	4	7.5	15.5
7	M6 × 1.0	7(H9)	1.5	6	M5 × 0.8	8.5	7.5	4.5	4.2	4	8.7	18.5

Type\Item	MA	MB	MC	N	O	OB	OC	P	Q	QA	R	RA	RB
2	M5 × 0.8	M5 × 0.8	10	12	26.6	9.5	13	29.5	30	31.8	M3 × 0.5	3.5	34
3	M5 × 0.8	M5 × 0.8	12.2	15.5	31.3	10.5	15	34	34.5	36.3	M3 × 0.5	3.5	38
7	M5 × 0.8	M5 × 0.8	14	18.5	37.8	12	16	40.5	41	42.8	M4 × 0.7	4.5	45


Type\Item	RC	RD	S	SA	SC	U	UA	UB	W	WA	WB	WC	WD
2	18.5	37	M3 × 0.5	5.3	21	10	2(H9)	2	11.5	2(H9)	2	12	2(H9)
3	23	43	M3 × 0.5	5.3	25	12	2(H9)	2	13.5	2(H9)	2	14	2(H9)
7	30	50	M4 × 0.7	6.5	29	14	3(H9)	3	15.5	3(H9)	3	16	3(H9)


Type\Item	XA	XB	XC	XD
2	35	4.5	M4 × 0.7	4
3	40	4.5	M4 × 0.7	4
7	50	5	M5 × 0.8	5

# Rotary Table Cylinder

## WRQ10~50

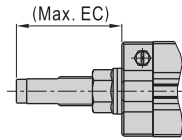

WRQ □-A(With internal shock absorber)

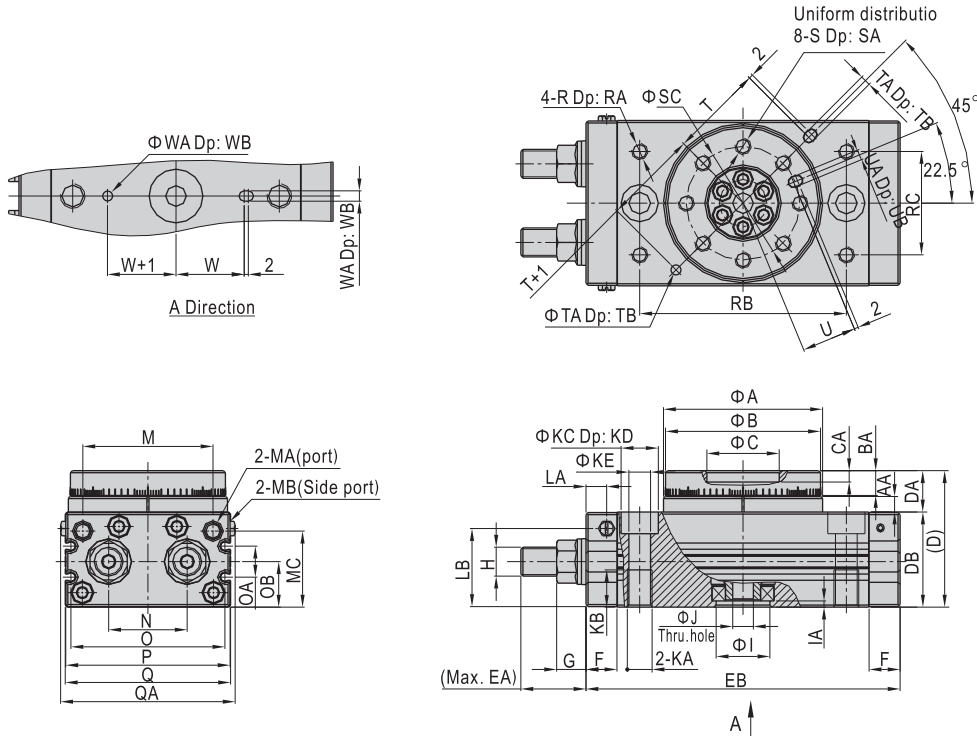

Type\Item	A	AA	B	BA	C	CA	D	DA	DB	EA	EB	EC	F
10	46(h9)	4.5	45(h9)	8	20(H9)	4.5	47	13	34	17.5	92	28.5	9.5
20	61(h9)	6.5	60(h9)	10	28(H9)	6.5	54	17	37	26	117	39.1	11
30	67(h9)	6.5	65(h9)	10	32(H9)	5	57	17	40	25.5	127	38.4	11.5
50	77(h9)	7.5	75(h9)	12	35(H9)	5.5	66	20	46	31.5	152	51	15


Type\Item	G	H	I	IA	J	KA	KB	KC	KD	KE	LA	LB	M
10	9.5	M10 × 1.0	15(H9)	3	5	M8 × 1.25	12	11	6.5	6.8	4.5	29	34.5
20	9.5	M12 × 1.0	17(H9)	2.5	9	M10 × 1.5	15	14	8.5	8.6	6	30	47
30	9.5	M12 × 1.0	22(H9)	3	9	M10 × 1.5	15	14	8.5	8.6	6.5	34	50
50	14	M14 × 1.5	26(H9)	3	10	M12 × 1.75	18	18	10.5	10.5	10	38	63

Type\Item	MA	MB	MC	N	O	OA	OB	P	Q	QA	R	RA	RB
10	M5 × 0.8	M5 × 0.8	27.8	20.5	45	13.5	15.5	49.5	50	54.5	M5 × 0.8	8	60
20	M5 × 0.8	M5 × 0.8	30	27.5	59	12	16	64.5	65	69.5	M6 × 1.0	8	76
30	1/8"	M5 × 0.8	32	29	64	13.5	18.5	69.5	70	74.5	M6 × 1.0	8	84
50	1/8"	M5 × 0.8	38	38	74.5	15	22	79.5	80	84.5	M8 × 1.25	8	100

Type\Item	RC	S	SA	SC	T	TA	TB	U	UA	UB	W	WA	WB
10	27	M5 × 0.8	8	32	27	3(H9)	3.5	15	3(H9)	3.5	19	3(H9)	3.5
20	34	M6 × 1.0	10	43	36	4(H9)	4.5	20.5	4(H9)	4.5	24	4(H9)	4.5
30	37	M6 × 1.0	10	48	39	4(H9)	4.5	23	4(H9)	5	28	4(H9)	4.5
50	50	M8 × 1.25	12	55	45	5(H9)	5.5	26.5	5(H9)	6	33	5(H9)	5.5

# Rotary Table Cylinder

## WRQ70~200

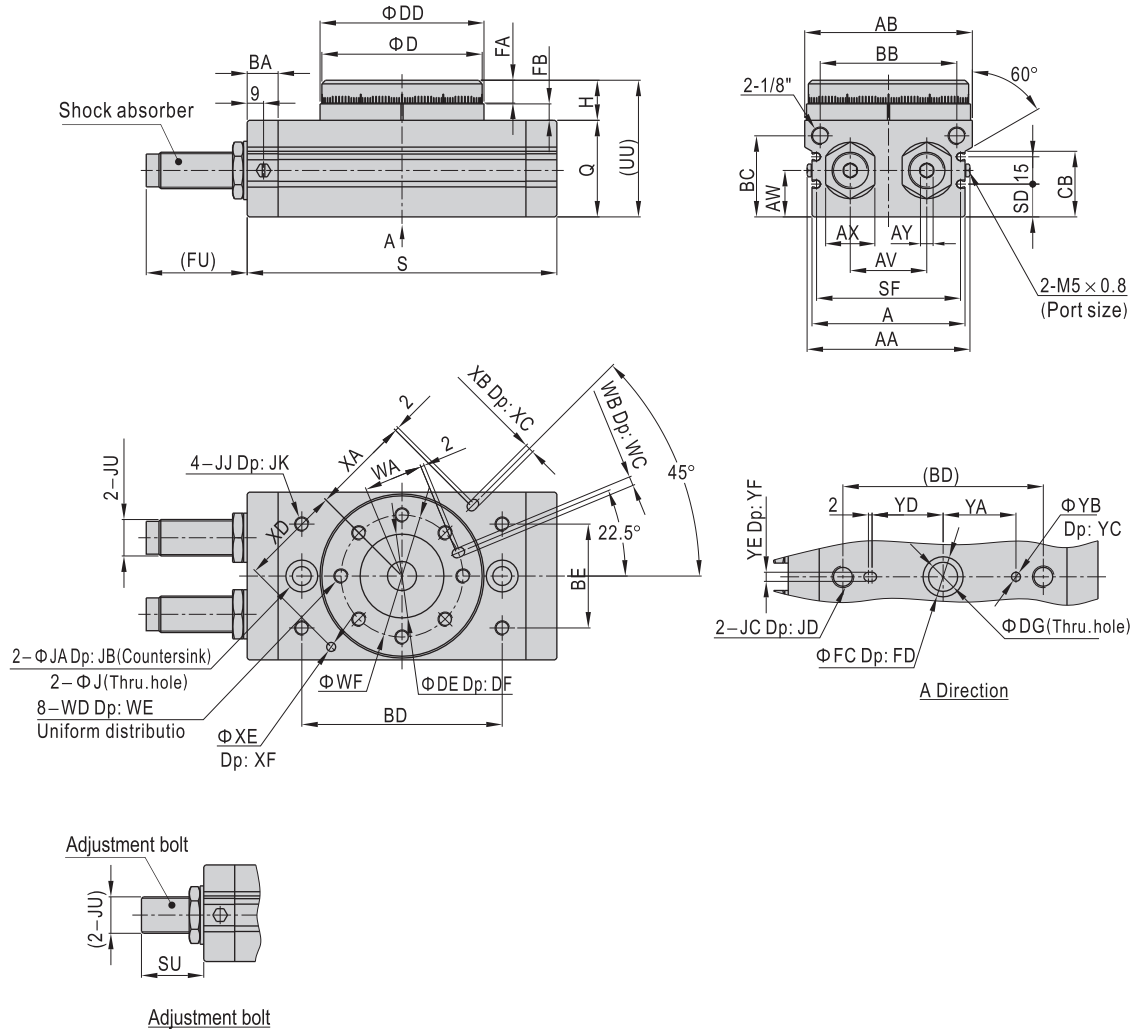

Type\Item	AA	AB	A	AV	AW	AX	AY	BA	BB	BC	BD	BE	CB	D	DD
70	88	92	84	42	25.5	29	8	17	75	44.5	110	57	36	88	90
100	99	102	95	50	29.5	29	8	17	85	50.5	130	66	42	98	100
200	117	120	113	60	36.5	36	10	24	103	63	150	80	57	116	118

Type\Item	DE	DF	DG	FA	FB	FC	FD	H	J	JA	JB	JC	JD	JK
70	46(h9)	5	16	12.5	9	22(H9)	3	22	10.4	17.5	10.5	M12 x 1.75	18	10
100	56(h9)	5	19	14.5	12	24(H9)	3	27	10.4	17.5	10.5	M12 x 1.75	18	10
200	64(h9)	8	24	16.5	15	32(H9)	5	32	14.2	20	12.5	M16 x 2.0	25	13

Type\Item	JJ	JU	Q	S	SD	SF	SU	UU	WA	WB	WC	WD
70	M8 x 1.25	M20 x 1.5	53	170	18	79	35	75	32.5	5(H9)	5.5	M8 x 1.25
100	M8 x 1.25	M20 x 1.5	59	189	22	90	35	86	37.5	6(H9)	6.5	M10 x 1.5
200	M12 x 1.75	M27 x 1.5	74	240	29	108	41	106	44	8(H9)	8.5	M12 x 1.75

Type\Item	WE	WF	XA	XB	XC	XD	XE	XF	YA	YB	YC	YD	YE	YF	FU
70	12.5	67	54	5(H9)	3.5	55	5(H9)	3.5	40	5(H9)	3.5	39	5(H9)	3.5	69
100	14.5	77	59	6(H9)	4.5	60	6(H9)	4.5	50	6(H9)	4.5	49	6(H9)	4.5	69
200	16.5	90	69	8(H9)	4.5	70	8(H9)	4.5	55	8(H9)	4.5	54	8(H9)	4.5	76

# Rotary Table Cylinder

## WRQ Series

### How to select product

- Determine the following working conditions according to the actual situation:
  - 1.1) Rotation angle  $\theta$ : The actual rotation angle must be within the maximum allowed range of rotation angle of cylinder.
  - 1.2) Rotation time  $t$ : The rotation time must be within the maximum allowed range of rotation time of cylinder.
  - 1.3) Installation position of cylinder: Allow enough installation space, so as to ensure leaving adequate space for rotation of cylinder and workpieces.
  - 1.4) Determination of loading mass and loading shape.
2. Calculation of necessary forgue needed when loading rotation (T(N.m)):

Calculate the necessary moment required for loading rotation according to the formula below, and combine with the forgue diagram of actual effect, to choose pneumatic cylinder with suitable forgue output.

$T = K \times I \times \omega$	T:Necessary forgue required for loading rotation (N.m)
$\omega = \frac{2\theta}{t^2}$	K:Coefficient of allowance, K is defined as 5
	I: Moment of inertia (kg.m <sup>2</sup> )
	$\omega$ : Angular acceleration (rad/s <sup>2</sup> )
	$\theta$ : Rotation Angle (rad)
	t: Rotation time (s)

#### 2.1. Calculation method of moment of inertia in different conditions

Diagram	Description	Calculation formula of moment of inertia	Rotation radius
	d: Diameter (m) m: Mass (kg)	$I = \frac{md^2}{8}$	$\frac{d^2}{8}$
Note: no special installation direction			
	d <sub>1</sub> : Diameter (m) d <sub>2</sub> : Diameter (m) m <sub>1</sub> : d <sub>1</sub> Mass (kg) m <sub>2</sub> : d <sub>2</sub> Mass (kg)	$I = \frac{m_1 d_1^2 + m_2 d_2^2}{8}$	$\frac{d_1^2 + d_2^2}{8}$
Note: compare d <sub>1</sub> with d <sub>2</sub> , disregard d <sub>1</sub> if d <sub>1</sub> is extremely tiny			
	d: Diameter (m) m: Mass (kg)	$I = \frac{md^2}{16}$	$\frac{d^2}{16}$
Note: no special installation direction			
	r: Radius (m) m: Mass (kg)	$I = \frac{2mr^2}{5}$	$\frac{2r^2}{5}$
Note: no special installation direction			
	a <sub>1</sub> : Length of stick (m) a <sub>2</sub> : Length of stick (m) m <sub>1</sub> : a <sub>1</sub> Mass (kg) m <sub>2</sub> : a <sub>2</sub> Mass (kg)	$I = \frac{m_1 a_1^2 + m_2 a_2^2}{3}$	$\frac{a_1^2 + a_2^2}{3}$
Note: 1. horizontal installation. 2. pay attention to the change of movement time when vertical installation.			
	a <sub>1</sub> : Sheet length (m) a <sub>2</sub> : Sheet length (m) b: Length of side (m) m <sub>1</sub> : a <sub>1</sub> Mass (kg) m <sub>2</sub> : a <sub>2</sub> Mass (kg)	$I = \frac{m_1(4a_1^2 + b^2) + m_2(4a_2^2 + b^2)}{12}$	$\frac{2a_1^2 + 2a_2^2 + b^2}{6}$
Note: 1. horizontal installation. 2. pay attention to the change of movement time when vertical installation.			
	a: Sheet length (m) b: Length of side (m) m: Mass (kg)	$I = \frac{m(a^2 + b^2)}{12}$	$\frac{a^2 + b^2}{12}$
Note: no special installation direction			

Diagram	Description	Calculation formula of moment of inertia	Rotation radius
	a: Sheet length (m) m: Mass (kg)	$I = \frac{ma^2}{12}$	$\frac{a^2}{12}$
Note: no special installation direction			
	a: Sheet length (m) m: Mass (kg)	$I = \frac{ma^2}{3}$	$\frac{a^2}{3}$
Note: 1. horizontal installation. 2. pay attention to the change of movement time when vertical installation.			
	a: Sheet length (m) b: Distance between the rotation axis and the gravity center of loading (m) m: Mass (kg)	$I = \frac{ma^2}{12} + mb^2$	$\frac{a^2}{12} + b^2$
Note: the cuboids are same too.			
	a <sub>1</sub> : Vertical distance between the rotation axis and the concentrated loading (m) a <sub>2</sub> : Length of arm (m) m: Mass of concentrated loading (kg) m <sub>1</sub> : Mass of arm (kg)	$I = m_1 a_1^2 + \frac{m_2 a_2^2}{3} + m_1 K$	
Note: 1. horizontal installation. 2. compared with m, disregard if m is extremely tiny. 3. calculate K according to the shape of concentrated loading row by row. For example, when the loading is spheroid, $K = \frac{2r^2}{5}$			
	a: Tooth number of gear b: Tooth number of loading gear	$I_a = \left(\frac{a}{b}\right)^2 I_b$	

#### 3. Calculation of maximum movement energy E<sub>max</sub>(J):

Calculate the maximum movement energy E<sub>max</sub> according to the formula below, and make sure that the maximum movement energy is within allowed energy range of the chosen pneumatic cylinder, excessive large movement energy would lead to damage of inner parts, please choose rotation cylinder attached with shock absorber when the movement energy is fairly large.

$$E_{\max} = \frac{1}{2} I \omega_{\max}^2 \quad \omega_{\max} = \frac{2\theta}{t} \quad \omega_{\max}: \text{Maximal angular velocity (rad/s)}$$

#### 4. Calculation of loading rate

Calculate the loading rate according to the formula below, and the loading rate must not be more than 1.

$$\text{Loading rate} = \frac{W_s}{\text{Maximal allowed axial loading}} + \frac{W_r}{\text{Maximal allowed radial loading}} + \frac{M}{\text{Maximal allowed bending moment of working platform}} \leq 1$$

W<sub>s</sub>: Actual axial loading    W<sub>r</sub>: Actual radial loading    M: Actual loaded bending moment of working platform

#### 5. Determination method

It could be used only when the chosen pneumatic cylinder must meet the requirements of article 2, 3 and 4 simultaneously.


# Rotary Table Cylinder

## WRQ Series

### Installation and application

#### 1. Rotation Direction and Rotation Angle


##### 1.1) Rotation Direction

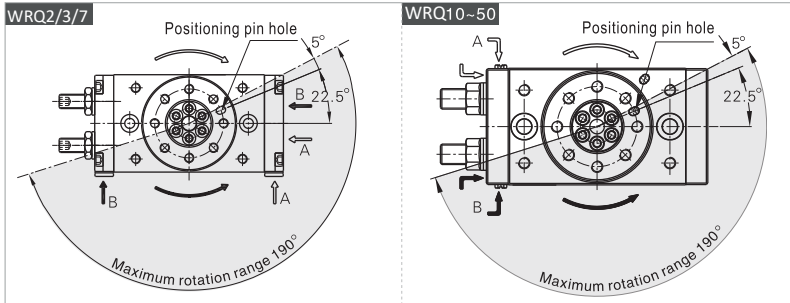

A) By adjusting the adjustment bolt, the rotation end can be set within the range shown in the up drawing: Maximum rotation is 190° ;

B) The rotary table turns in the clockwise direction when the A port is pressurized, and in the counter-clockwise direction when the B port is pressurized.

##### 1.2) Rotation Range Example(90° Rotation)

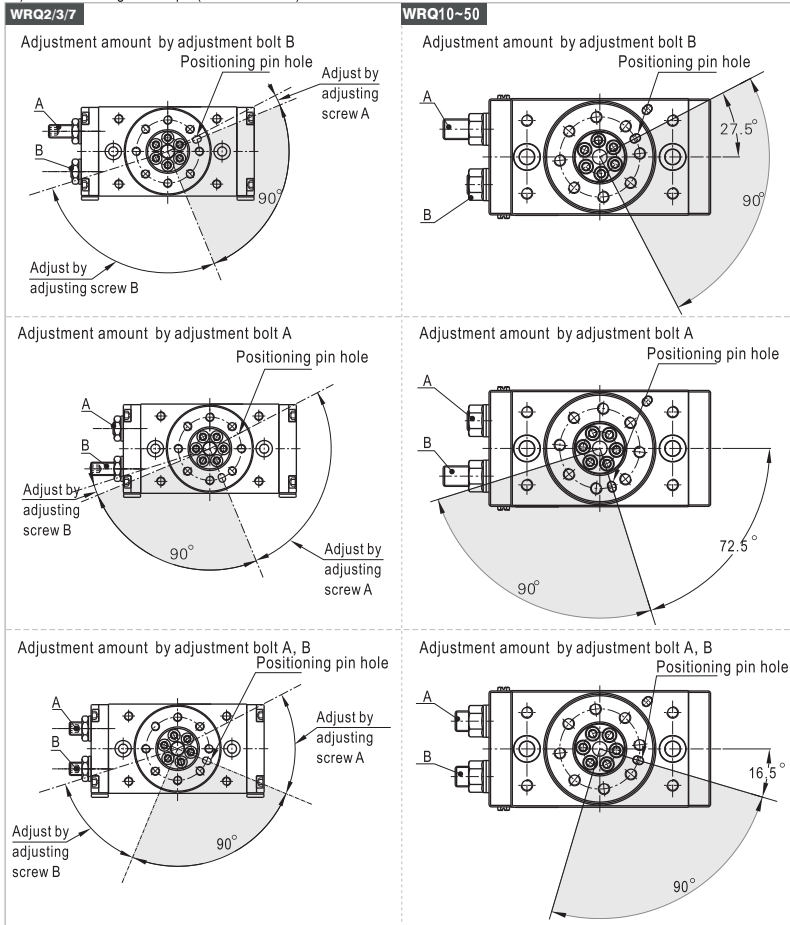

1.3) The rotation angle can also be set on a type with internal absorber.

Model	Adjustment angle per rotation of angle (adjustment screw)	Model	Adjustment angle per rotation of angle (adjustment screw or shock absorber)
WRQ2	11.5°	WRQ10	10.2°
WRQ3	10.9°	WRQ20	6.5°
WRQ7	10.2°	WRQ30	6.5°
		WRQ50	8.2°
		WRQ70	7.0°
		WRQ100	6.1°
		WRQ200	4.9°

- The range of rotation angle has been adjusted to the maximum in the factory, please do not enlarge the rotation angle any more.
- The movement energy should not exceed the allowed maximum energy, or the inner parts will be damaged.
- The rotary parts need no lubrication.
- Series WRQ is equipped with a rubber bumper or shock absorber. Therefore, perform rotation adjustment in the pressurized condition (minimum operation pressure: 0.1 Mpa or more for adjustment bolt and internal shock absorber types, and 0.2 MPa or more for external shock absorber type.)
- Refer to the table below for tightening torques of the shock absorber setting nut.

Shock absorber size	Max. tightening torque(Nm)
M10	3.5
M12	8.0
M14	11.0
M20	24.0
M27	63.0

- Never loosen the bottom screw of the shock absorber. (It is not an adjustment screw.) That may cause oil leakage.
- Shock absorbers are consumable parts. When a decrease in energy absorption capacity is noticed, it must be replaced.

Rotary table cylinder	Shock absorber
WRQ10	ACA1006-A
WRQ20/WRQ30	ACA1209-A
WRQ50	ACA1412-A
WRQ70/WRQ100	ACA2020-A
WRQ200	ACA2725-A